

Formatting the Flash (grandMA Light)

The following tasks may be performed by qualified personnel only! By disregarding the instructions or the prescribed sequence of tasks the unit can be severely damaged. These instructions are intended as a guide for qualified personnel.

You need:

- DOS Boot Disc (WIN95B oder 98); create it with your PC (www.bootdisk.com)
- grandMA utility disc ; find it inside your desk or download from www.malighting.de homepage
- grandMA software discs download from www.malighting.de homepage

A flash can be damaged during update. The desk interrupts booting (blue screen). Before formatting the flash, be shure, that the disc drive works properly.

1. Insert the boot disc and have a keyboard ready for use,
2. Switch ON the desk and wait, till the cursor flashes at A:\>
3. type **lock c:** and confirm with ENTER
4. type **Y** (yes) (*or Ja=j*) and confirm with ENTER
5. remove DOS-boot disc and insert utility disc
6. type **cd doc42** and confirm with ENTER
7. type **dinfo** and confirm with ENTER
Message: Disk on Chip found
8. type **dformat c:** and confirm with ENTER
9. type **Y** (yes) and confirm with ENTER
wait for message: Format complete. Ignore message „please reboot to let DiskOnChip 2000
uninstall itself“
10. type **vxsys c:** and confirm with ENTER
11. type **Y** (yes) and confirm with ENTER
12. type **cd..** and confirm with ENTER
A:\>
13. type **unzip** and confirm with ENTER
remove utility disc when unzipping has finished
14. restart the desk with Contr + Alt + Del, but without the boot disc
15. When „To enter Utility menu press any key“ appears, press any key
16. Continue with **1** (Restore grandMA operating system)
or (with empty disc drive)
continue with **5** (you need the grandMA Software discs)

Then restart the desk